Technical data sheet

AMB24-IP

Proportional, Non-Spring Return, 24 V, Cloud, BACnet/IP, Modbus TCP

- Torque motor 20 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, Cloud, communicative, Hybrid
- Conversion of sensor signals
- Ethernet 10/100 Mbit/s, TCP/IP, integrated web server
- Communication via BACnet IP, Modbus TCP and Cloud





5-year warranty









echnical data		
Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	6 W
	Power consumption in rest position	3 W
	Power consumption for wire sizing	8 VA
	Transformer sizing	8 VA (class 2 power source)
	Connection supply / control	cable 3 ft. [1 m], 6 x 0.5 mm ²
	Parallel operation	Yes (note the performance data)
	Electrical Connection	18 GA appliance cable, 1/2" conduit connector and RJ45 socket (ethernet)
	Overload Protection	electronic throughout 095° rotation
Functional data	Torque motor	20 Nm
	Communicative control	Cloud BACnet IP Modbus TCP
	Operating range Y	210 V
	Operating range Y note	Hybrid via 210 V
	Input Impedance	34 kΩ
	Operating range Y variable	0.510 V
	Position feedback U	210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	VDC variable
	Position accuracy	±5%
	Direction of motion motor	selectable with switch 0/1
	Manual override	external push button
	Angle of rotation	95°
	Angle of rotation note	adjustable with mechanical stop
	Running Time (Motor)	150 s / 90°
	Running time motor variable	70220 s
	Adaptation Setting Range	manual
	Noise level, motor	45 dB(A)
	Position indication	Mechanically, pluggable

Degree of protection IEC/EN

IP54



Technical data sheet	AMB24-IP	
Degree of protection note	IP54 when using protective cap or protective grommet for RJ45 socket	
Degree of protection NEMA/UL	NEMA 1	
Enclosure	UL Enclosure Type 1	
EMC	CE according to 2014/30/EU	
Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2014/30/EU and 2014/35/EU; Listed to UL 2043 - suitable for use in air plenums per Section 300.22(c) of the NEC and Section 602.2 of the IMC	
Quality Standard	ISO 9001	

Type 1

0.8 kV

-22...122°F [-30...50°C]

-40...176°F [-40...80°C]

maintenance-free

UL94-5VA

Max. 95% RH, non-condensing

.

Mode of operation

Ambient temperature Storage temperature

Ambient humidity

Housing material

Servicing

Rated impulse voltage supply / control

Safety data

Materials

Safety notes



- The device must not be used outside the specified field of application, especially not in aircraft
 or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet.
- Only authorized specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation

The actuator is controlled via the Cloud, BACnet IP or Modbus TCP and drives to the position defined by the control signal. Various data points can be written and read via the same interfaces.

Hybrid mode:

The actuator receives its analog control signal from the higher level controller and drives to the position defined. Using the Cloud, BACnet IP or Modbus TCP, various data points can be read and with the exception of the control signal written.

Converter for sensors

Connection option for two sensors (passive sensor, active sensor or switching contact). The actuator serves as an analog/digital converter for the transmission of the sensor signal to the higher level system.

Communication

The configuration can be carried out through the integrated web server (RJ45 connection to the web browser), by communicative means or via the Cloud.

Additional information regarding the integrated web server can be found in the separate documentation.




http://belimo.local:8080
The Notebook must be set to "DHCP".
Make sure that only one network
connection is active.

Standard IP address:

http://192.168.0.10:8080 Static IP address

Password (read-only):

User name: «guest» Password: «guest»

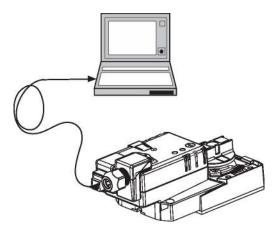

Positioning signal inversion

This can be inverted in cases of control with an analog positioning signal. The inversion causes the reversal of the standard behavior, i.e. for control signal 0%, the actuator is opened to max and for control signal 100%, the actuator is closed.

Simple direct mounting

Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an antirotation device to prevent the actuator from revolving.

Data recording

The recorded data (integrated data recording for 13 months) can be used for analytical

purposes.

Download csv files via web browser.

Manual override

Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Home position

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.

The actuator then moves into the position defined by the positioning signal.

Adaptation and synchronisation

An adaptation can be triggered manually by pressing the "Adaptation" button. Both mechanical end stops are detected during the adaptation (entire setting range).

The actuator then moves into the position defined by the positioning signal.



Accessories

Electrical accessories	Description	Туре
	Positioner for front-panel mounting	SGF24
	Positioner for wall mounting	SGA24
	Resistor, 500 Ω , 1/4" wire resistor with 6" pigtail wires	ZG-R01
	Cable Gland	43442-00001
	(NEMA 4 models)	
	Cable conduit connector 1/2"	TF-CC US
	Transformer, AC 120 V to AC 24 V, 40 VA	ZG-X40
	Battery, 12 V, 1.2 Ah (two required)	NSV-BAT
	Battery backup system, for non-spring return models	NSV24 US
	Feedback potentiometer 15 kΩ gray	P15000A-F GR
	Feedback potentiometer 10 kΩ add-on, grey	P10000A GR
	Feedback potentiometer 5 kΩ add-on, grey	P5000A GR
	Feedback potentiometer 2.8 kΩ add-on, grey	P2800A GR
	Feedback potentiometer 1 kΩ add-on, grey	P1000A GR
	Feedback potentiometer 500 Ω add-on, grey	P500A GR
	Feedback potentiometer 140 Ω add-on, grey	P140A GR
	Auxiliary switch, mercury-free	P475-1
	Auxiliary switch, mercury-free	P475
	Auxiliary switch 2 x SPDT add-on	S2A
	Auxiliary switch 1 x SPDT add-on	S1A



Technical data sheet AMB24-IP

Mechanical accessories

Description	Туре
Damper crank arm Slot width 6.2 mm, clamping range Ø1018 mm	KH6
Damper crank arm Slot width 8.2 mm, clamping range Ø1018 mm	KH8
Damper crank arm Slot width 8.2 mm, clamping range Ø1425 mm	KH10
Damper crank arm Slot width 8.2 mm, for Ø1.05"	KH12
Ball joint suitable for damper crank arm KH8, Multipack 10 pcs.	KG6
Ball joint suitable for damper crank arm KH8, Multipack 10 pcs.	KG8
Ball joint suitable for damper crank arm KH8 / KH10, Multipack 10 pcs.	KG10A
Push rod for KG6 & KG8 ball joints (36" L, 5/16" diameter).	SH8
Push rod for KG10A ball joint 36" L, 3/8" diameter	SH10
Damper clip for damper blade, 3.5" width.	ZG-DC1
Damper clip for damper blade, 6" width.	ZG-DC2
Weather shield 330x203x152 mm [13x8x6"] (LxBxH)	ZS-100
Base plate, for ZS-100	ZS-101
Weather shield 406x213x102 mm [16x8-3/8x4"] (LxWxH)	ZS-150
Shaft extension 240 mm Ø20 mm for damper shaft Ø 822.7 mm	AV8-25
Anti-rotation bracket TF/NKQ/AM/NM/LM.	TF-P
17" Mounting Bracket for AF,NF,GM,AM,SM	ZG-100
Mounting Bracket: AF,NF,LF,GM,AM,NM,SM	ZG-101
Wrench 0.32 in and 0.39 in [8 mm and 10 mm]	TOOL-06
Adapter for auxiliary switch and feedback potentiometer	Z-SPA
Actuator arm for standard shaft clamp (one-sided)	AH-25
<lamp 1="" 1"<="" 2",="" 3="" 4",="" am="" nm="" p=""></lamp>	K-AM25
Shaft clamp reversible, clamping range Ø1020 mm	K-SA
Mounting Bracket: ZS-260 Right Angle	ZG-109
Linkage kit	ZG-110
Mounting bracket	ZG-112
for LF	
1" diameter jackshaft adaptor (11" L).	ZG-JSA-1
1-5/16" diameter jackshaft adaptor (12" L).	ZG-JSA-2
1.05" diameter jackshaft adaptor (12" L).	ZG-JSA-3
Mounting kit for linkage operation for flat installation	ZG-NMA
Explosion proof housing 406x254x164 mm [16x10x6.435"] (LxBxH), UL	ZS-260
and CSA, Class I, Zone 1&2, Groups B, C, D, (NEMA 7), Class III, Hazardous	
(classified) Locations	
Weather shield 438x222x140 mm [17-1/4x8-3/4x5-1/2"] (LxBxH), NEMA	ZS-300
4X, with mounting brackets	70 000 5
Weather shield 438x222x140 mm [17-1/4x8-3/4x5-1/2"] (LxBxH), NEMA	ZS-300-5
4X, with mounting brackets	70 000 04
Shaft extension 1/2"	ZS-300-C1
Shaft extension 3/4"	ZS-300-C2
Shaft extension 1"	ZS-300-C3
Base plate extension for SMA to SM/AM/SMD24R	Z-SMA
Mounting plate for SGF.	ZG-SGF
Description	Туре
Signal simulator, Power supply AC 120 V	PS-100
Connection cable 16 ft [5 m], A: RJ11 6/4 ZTH EU, B: 6-pin for connection to	ZK1-GEN
service socket	71/4 CEN
Connection cable 10 ft [3 m], A: RJ11 6/4 ZTH EU, B: 3-pin Weidmüller and	ZK4-GEN
supply connection	7TLLLIC
Service Tool, with ZIP-USB function, for programmable and	ZTH US
communicative Belimo actuators, VAV controller and HVAC performance	
devices	

Electrical installation



Service tools

Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.



Functions



The connection diagrams shows connections for the first sensor on terminal S1, while the second sensor can be connected identically on terminal S2.

Parallel use of different sensor types is permitted.

For hybrid operation, S1 is used for the control signal Y and must be configured as an active sensor.

Dimensions

